

# JODIE


Jodie White - Meeting chair

**FREZZA**




## TECHNICAL DETAILS

unibody	with low backrest, in supporting elastic mesh fixed to a white nylon (RAL 2003) frame that supports and keeps the mesh tensioned. The mesh backrest is breathable and adapts to the user's body shape while properly supporting the spine.
armrests	fixed in white nylon (RAL 9003).
device	<u>harmonic tilting device</u> with oscillation angles 7° backwards, 4° forwards. Seat starting position 3° backwards. This system is designed to tilt the chair slightly for a pleasant feel.

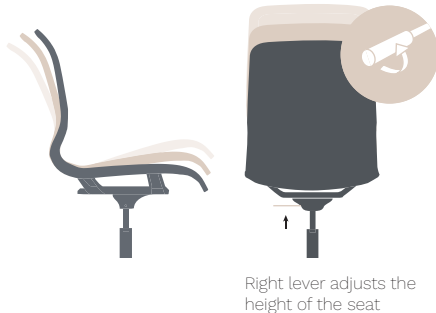

height adjustment	with gas lift system, which allows a 9 cm excursion.
base	<u>5-star base</u> in white nylon (RAL 9003) or polished die-cast aluminium. Self-locking, dual-tread, rubbered, swivel castors, Ø 65 mm as standard.
ergonomics	Jodie is equipped with the necessary mechanisms for proper and comfortable use, even for prolonged periods, as long as the following conditions are met: the standard sitting position requires maintaining angles of 90° between torso and thigh, between thigh and leg, and between leg and foot. These last two angles are essential so that the foot, resting completely on the surface below, discharges part of the weight of the lower limb onto it, preventing excessive compression on the back thigh surface and promoting blood circulation to the heart.

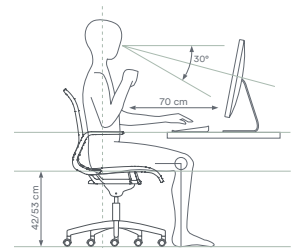

base finishes



Polished aluminium



White nylon

mesh

Cat. K

Max



S9M0



S9G0



S9G1




S9NE


## ABACUS

### Meeting


Low backrest.  
Gas lift system.  
Without armrests.

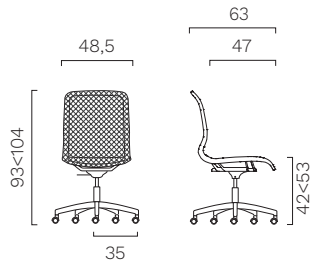

Low backrest.  
Gas lift system.  
Fixed armrests.

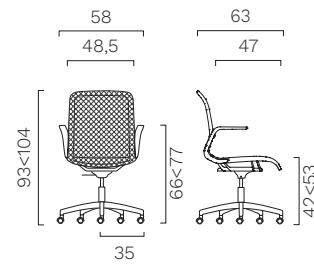

Low backrest.  
Harmonic tilting device.  
Without armrests.

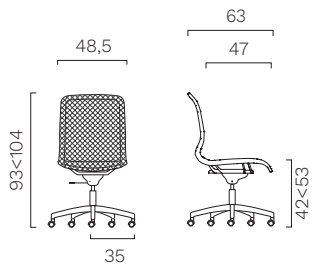

Low backrest.  
Harmonic tilting device.  
Fixed armrests.

